
## **CoverLite® MR9" and MR12"** Technical and Loading Guidelines

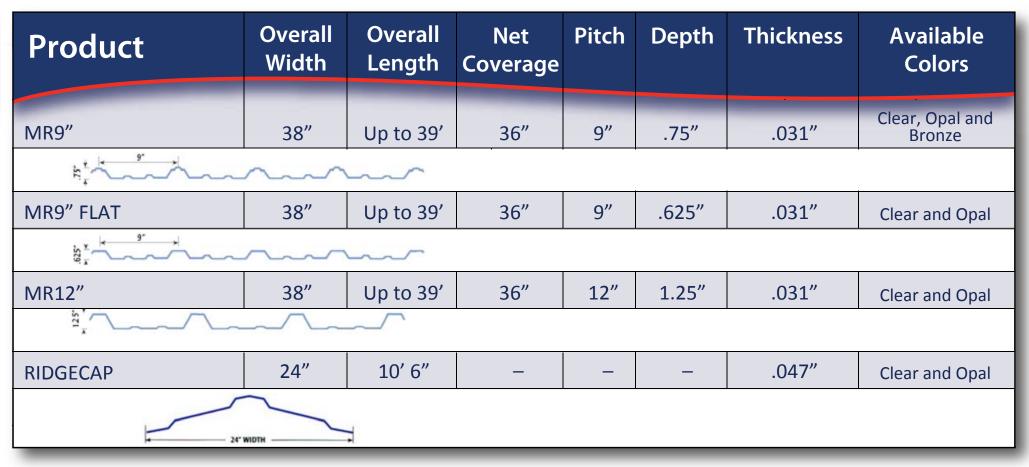

Light Transmission: Clear 90%, Opal 66%, Bronze 31%

Loading Guide: Maximum 25 psf. wind load with 3' on center vertical supports

**Purlin Spacing:** Maximum hortizontal spacing 36" at ridge and gutter and 48" maximum purlin spacing in the mid-span

Pre-Drill Screw Holes: 5/64" larger than screw size to allow for expansion and contraction of panel

Screws & Washers: Use 1" or 2" #10 Woodmate w/wing or 1" or 2" #12 Self-Drilling/Self Tapping screw with a minimum 1/2" neoprene bonded washer Material Weight: .24 lbs/sq.ft.

**Roof Pitch:** Minimum 3:12



1212 Enterprise Drive, De Pere, WI 54115

P:888-602-4441 / F:920-336-9301