
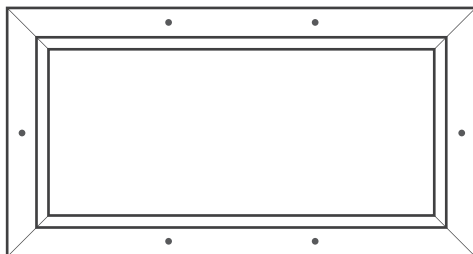


UNFINISHED CURB

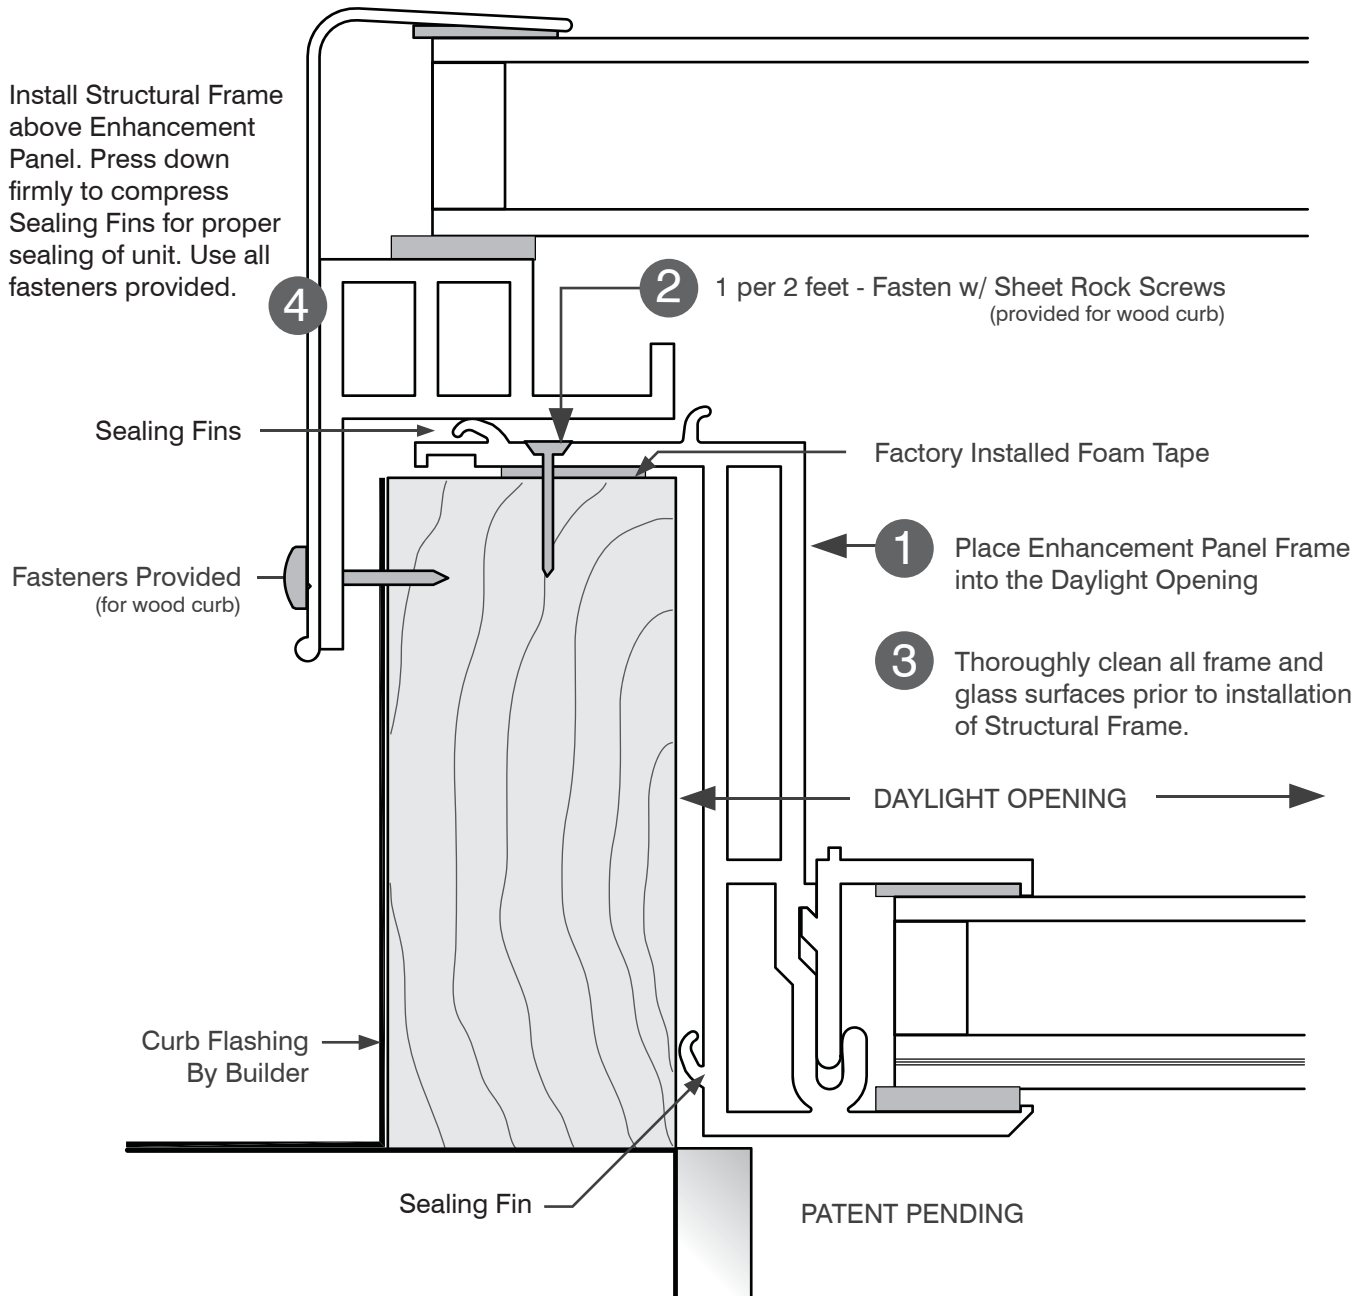



NOTE:
Approximate fastener locations for typical 2650 Enhancement Panel Frame.

FINISHED CURB

Install Structural Frame above Enhancement Panel. Press down firmly to compress Sealing Fins for proper sealing of unit. Use all fasteners provided.

Sealing Fins

Fasteners Provided (for wood curb)

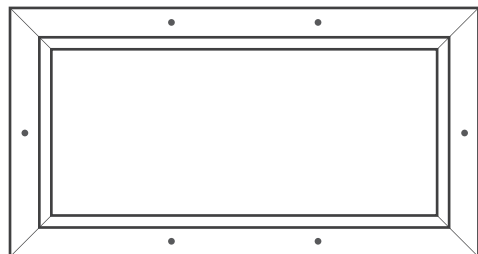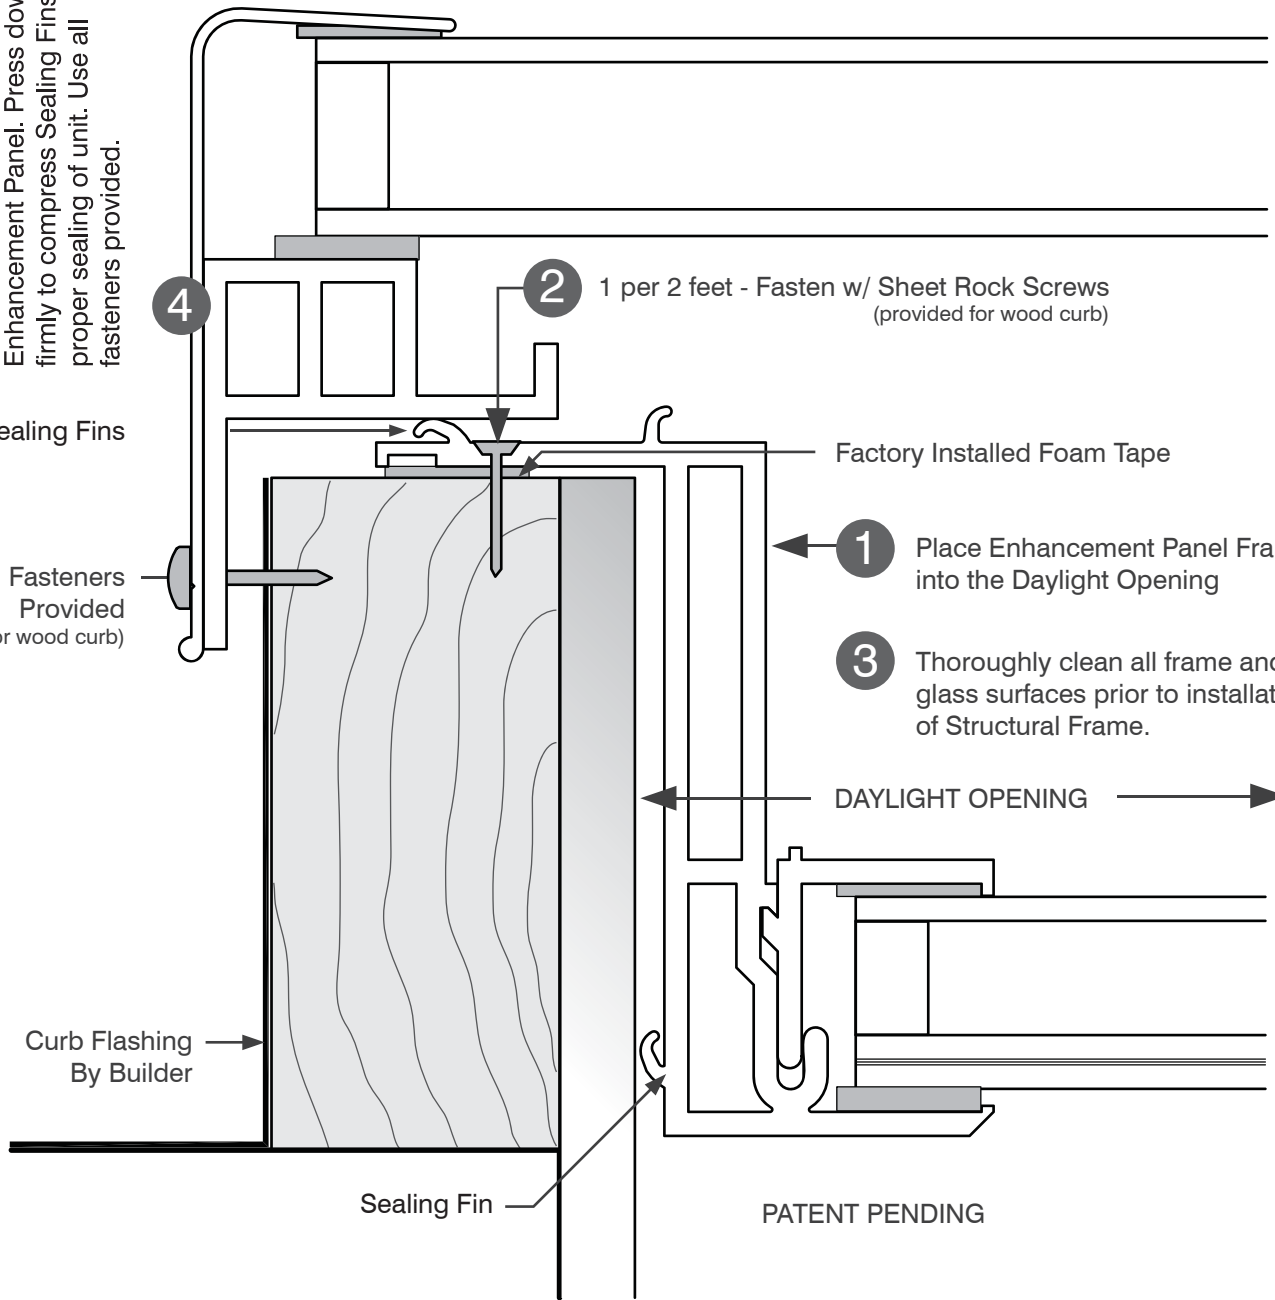



NOTE:
Approximate fastener locations for typical 2650 Enhancement Panel Frame.

CURB THICKNESS 2 INCHES OR MORE

Install Structural Frame above Enhancement Panel. Press down firmly to compress Sealing Fins for proper sealing of unit. Use all fasteners provided.

Apply Double Layer of Curb Tape Provided

Fasteners Provided (for wood curb)

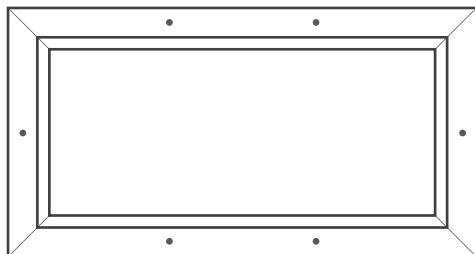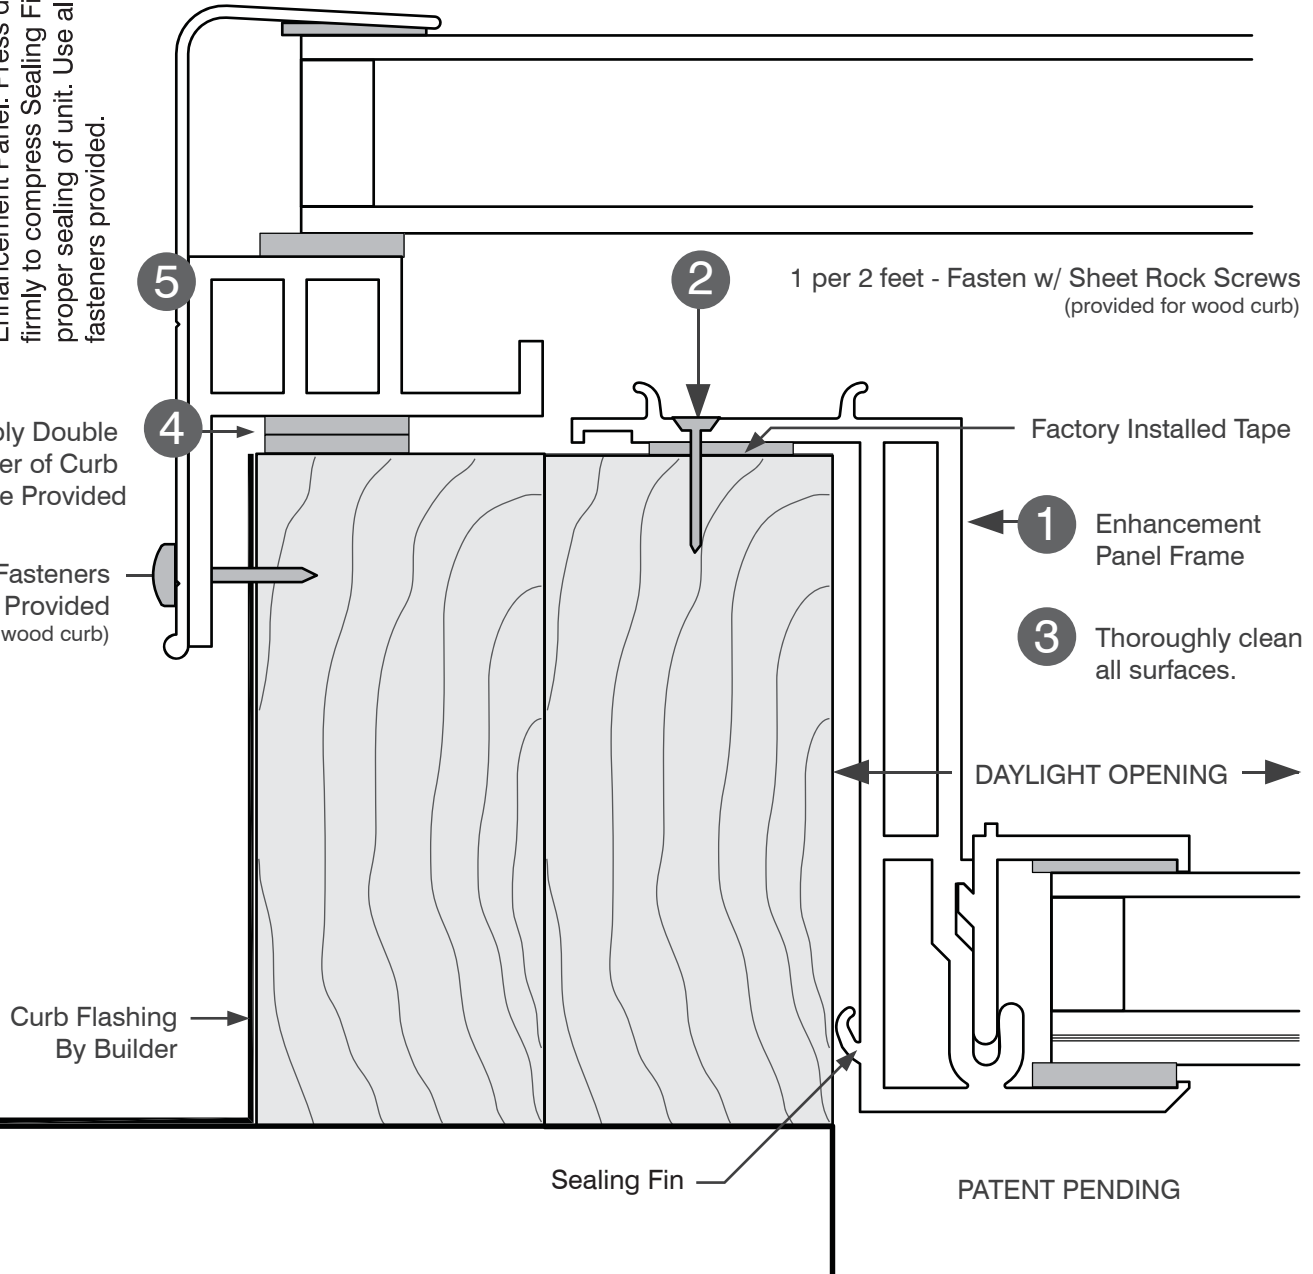

NOTE:
Approximate fastener locations for typical 2650 Enhancement Panel Frame.