



Your Clear Choice

SKYLITES • SUNROOMS • RAILINGS

Washington
3307 Cedar Street
Everett, WA 98201-4517
425-259-6000 or 745-6000
1-800-666-6065 USA
Fax: 425-258-6734

Spokane Distribution
2721 Van Marter Way, Ste. 5
Spokane, WA 99206
1-800-382-5403 USA
Fax: 509-921-2137


Salem Distribution
1452 McDonald St. NE
Salem, OR 97303
503-391-6000
1-800-664-1257 USA
Fax: 503-391-0974

METAL ROOF INSTALL INSTRUCTIONS FOR TUBULAR SKYLIGHTS

Split seams, fill with silicone, pinch closed and flatten.

Tubular skylight flashing flange.

Hole cut-out

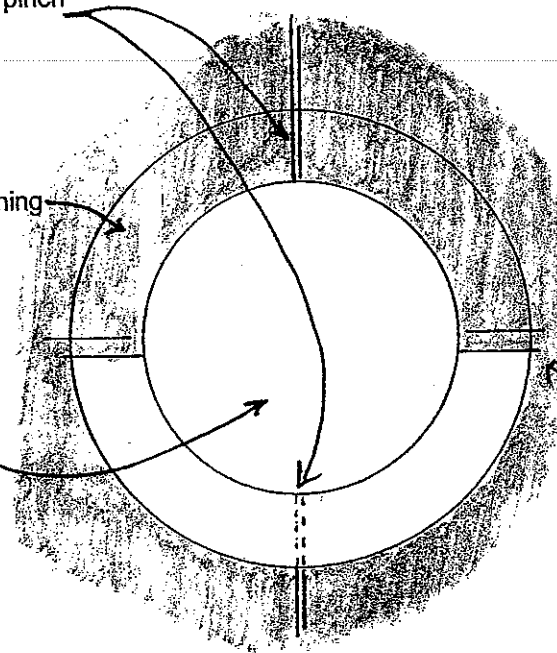

Slit roofing approx. 2" down from centerline width of tubular skylight flashing to allow flashing to slide under and up.

Center tube on a seam or seams of metal roofing. Cut hole for tube then draw centerline. 2" down from centerline, cut left and right to width of tubular skylight flashing. Split top seam, fill with silicone pinch closed and flatten. Split the lower metal roof seam, fill with silicone, pinch closed and flatten. Coat underside of tubular skylight flashing with roofing mastic and slide flashing up under metal roof to where metal roof and flashing shroud come together. Silicone intersections.